

VEF TA-201 USER'S MANUAL

FEATURE LIST

- Flash button.
- Pause button.
- Last number redial.
- One touch switch pulse to tone dialing mode.
- Tone/pulse switch.
- 3 step ringer volume control (high/ low/ off).
- Desktop/ wall mounting selection.

INSTALLATION

1. Connect one end of the coiled cord to the jack of the handset, connect the other end to the jack of the base set.
2. Plug one end of flat cable to line jack of the phone, plug the other end to the wall jack.

OPERATION

RINGER VOLUME HI/LO/OFF SELECTOR

Select the desired function of the tone ringer.

HI...Normal setting rings on incoming calls.

LO...The ringer sound level will be cut down.

OFF...The ringer sound will be switched off.

T/P DIALING SELECTOR

You can choose the type of dialing by selecting TONE/PULSE mode. When you dial a number in the pulse mode, you can just press P/T button to switch to tone mode.

MAKING PHONE CALLS

1. Pick up the handset.
2. Dial the number you want to call.

RECEIVING A CALL

1. Pick up the handset when the phone rings.
2. When you finish the phone call, put the handset back on the phone base to release the telephone line.

LAST NUMBER REDIALING

1. Pick up the handset, you will hear a dial tone.
2. Press REDIAL button, the last number will be automatically redialed.

FLASH FUNCTION

The FLASH button replaces the hook switch when using features such as call waiting and call forwarding.

PAUSE FUNCTION

To dial a number from an automatic switch board system (PABX), you must first dial an access code. Then pause a few second to wait for an outside line. The "PAUSE" key stores a 2-3 seconds pause to give the automatic switchboard time to find available outside line.