

INSTRUCTION MANUAL

MODEL: VEF TA-204IP

INSTRUCTIONS

Thank you for your purchasing our newest telephone with **Caller ID phone with IP function**. This manual is designed to familiarize with your phone. To get the maximum use from this product, we suggest that you read this **Instruction Manual** before operating it.

FEATURES

- FSK/DTMF dual system Auto switch, FSK message auto-adjusts the time of the unit.
- 30 groups of outgoing messages.
- 60 groups of incoming messages
- 4 steps of LCD brightness adjustments.
- LCD displays incoming number, date, time, and total incoming calls
- Outgoing dialed number and conversation time review and redial back.
- Local area code setting
- Fast checking the incoming call by calling number and calling date & time
- On-hook pre-dial and edit dialing number

PARTS CHECKING LIST

User's Manual Base Handset Straight Line Cord Coiled Cord

LCD DESCRIPTION

New: is illuminated when the call comes first time (new call). After the new call is reviewed, it will disappear.
REP.: is illuminated when the call comes in over one time, the time showed on the LCD is the last calling time.
OUT: is illuminated when the out going call is checked.

NOTE: Do not expose LCD in the sun for long time.

INSTALLATION

- This phone requires 3 AA-sized 1.5V batteries. Open the battery compartment cover and insert the batteries in the right polarity, then close the cover. When you find the LCD display becomes very dark and some function is not correct, please change the batteries.
- Plug line cord into jack at the rear of the telephone base, connect the other end of the line cord to the telephone line. Plug coiled cord into handset modular jack. Plug the other end into the jack at the left side of the telephone.
- Caller ID function is available only after you apply this service to the local telecom bureau.

SYSTEM SET UP

ADJUST TIME

Hold **UP** key for 3 seconds and the digit of year will flash, press **UP** or **DOWN** key to edit the digit and press **Set** key to move the cursor, repeat the same operation to set month, date and so on. Lift the handset or press **H-F** Key to exit setting status.

When receiving a call under FSK format, Time and Date will be updated automatically.

ADJUST THE LCD BRIGHTNESS

Hold **DOWN** key for 3 seconds and LCD displays the current brightness (there are 4 grades in all), press **UP** or **DOWN** key to adjust brightness to your best fit and lift the handset or press **H-F** key to exit setting status.

SET THE LOCAL AREA CODE

Hold **Dial** key for 3 seconds and LCD displays the original area code, then input the local area code (example: KL is "03") with **Del** key to correct, **Set** key to confirm. Lift the handset or press **Speaker** key to exit setting status.

Once you've set this function, the incoming calls will not include local area code, which is convenient to call back.

DIRECT OR EXT. MODE SETTING

Hold **Out** key for 3 seconds and LCD displays "0", input 1 to set as Ext. mode and input 0 to set as direct mode, namely direct connected with PSTN, finally, press **Set** key to confirm and exit.

If you've set as Ext. mode, you can press **Set** key after inputting 1 to set the first CO. key number such as 9, press **Set** key again to set the second and press **Set** key once more to exit.

RINGER VOLUME ADJUSTMENT

Slide the ringer switch to HI/LOW to adjust the ringer volume according to personal preference.

P/T MODE ADJUSTMENT

Slide the switch to P/T position to select PULSE or TONE dialing mode

SPEAKER VOLUME HI/LOW ADJUSTMENT

Slide the **SPEAKER** switch to HI/LOW to adjust the ringer volume according to personal preference

ALERT FUNCTION

Slide the switch to “ON” position; abnormal users can’t parallel another telephone to make a call. If users need to parallel another telephone, please turn alert switch to “OFF” position.

IP access number setting

Press **Set** key, and then **Out** key, LCD displays **PASS-**, input the password up to 5 digits and followed by # (the original value is 54321), LCD displays **-1-2-3-**, and then you come to the setting status.

Press **1** to modify the password and LCD displays **PASS -54321-** → input the digit up to 5 digits → press **Set** key to affirm and return to setting status.

Press **2** to set IP access number of the first group IP1 and LCD displays **GATE1-** → input IP access number → press **Set** key to affirm and return to setting status.

Press **3** to set IP access number of the second group IP2 and LCD displays **GATE2-** → input IP access number → press **Set** key to affirm and return to setting status.

Note: while there comes a suggestive tone during inputting IP access number, you must press **Dial** key once after inputting IP access number, which means only after detecting the suggested tone can latter numbers be dialed. You can also set IP information by delay mode and press **Redial** key once to delay one second. The number of Redial is changeable to suit the proper surroundings.

IP account number, password number setting

Press **Set** key, and then **DEL** key, LCD displays **PASS-**, input the password up to 5 digits and followed by # (the original value is 12345), LCD displays **-1-2-3-4-**, and then you come to the setting status.

Press **1** to modify the password and LCD displays **PASS-12345-** → input the digit up to 5 digits → press **Set** key to affirm and return to setting status.

Press **2** to set IP information of IP1 and LCD displays **IP1-** → input IP account number → input IP password → press **Set** key and LCD displays **01-0** and enter IP open area code setting mode → input the corresponding open area code of IP1 → press **Set** key to set the next group (50 groups in all) → press **Set** key to set the end code → input end code → press **Set** key to exit.

Press 3 to set IP information of IP2 and LCD displays “IP2-”. The setting of IP2 is similar to IP1.

Note: when there comes a suggestive tone during inputting IP account number and password, you must press **Dial** key once after inputting IP account number, which means only after detecting the suggested tone can latter numbers be dialed. You can also set IP information by delay mode and press **Redial** key once to delay one second. The number of Redial is changeable to suit the proper surroundings.

Press 4 to set the locked number and LCD displays “01-”, input the number and press **Set** key to set the next (20 groups in all).

ANSWERING CALLS

- When receiving a phone call, the telephone will detect the FSK or DTMF format and display the calling number. If this is a FSK format, caller ID signal, the current date and time will also be displayed. If this is a newly coming call, the “NEW” icon will be displayed. If the incoming call is a repeated number, the “REP” icon will be displayed. If the incoming call is a private call, the icon ---P--- will be displayed. If the incoming call is out of area, the icon ---O--- will be displayed. If a wrong number comes in, the ---E--- will be displayed.

From Handset

1. Pick up the handset. Talk with the other end.
2. When finished, return the handset to the cradle

NOTE: To receive the Caller ID message correctly, please answer a call after the telephone rings two times.

MAKING CALLS

Using Handset

1. Pick up the handset, then you will hear a dialing tone
2. Enter the desired number. The LCD will display the call duration time after 6 seconds.
3. When finished, return the handset to the cradle

Redial

1. If line is engaged
2. Press **RD** key for REDIAL. The telephone will dial the telephone No. Automatically.

RECEIVE THE CALLER ID NUMBER

- When receiving a phone call, the telephone will detect the FSK format and display the calling number. If this is a FSK format, caller ID signal, the current date and time will also be displayed. If this is a newly coming call, the **NEW** icon will be displayed. If the incoming call is a repeated number, the **REP** icon will be displayed. If the incoming call is a private call, the icon **---P---** will be displayed. If the incoming call is out of area, the icon **---O---** will be displayed. If a wrong number comes in, the **---E---** will be displayed.
- You can use **UP** or **DOWN** key to check the incoming call information including number, date and time, (Pressing **UP** or **DOWN** key over 3 seconds, you can check the incoming calls very fast.) You can directly dial back by pressing **BACK** key. If you call back a local call, press **BACK** one time; If you call back a long distance call and the coming call is not headed with a "0" (or the long distance code number), press **BACK** twice.

Dialed numbers check

- You can check the outgoing dialed numbers and the conversation time with the **OUT** key. If you want dial that number again, directly press **BACK** key.

Pre-dial function

- At on-hook state, you can key in the calling number and edit the input mistake with the **DEL** key. After that, press **BACK** to dial out.

DELETE FUNCTION

- In set mode, **DEL** key is used to quit set.
- When you use pre-dial function, **DEL** is used to correct the input mistake.
- When you check the incoming call memories, **DEL** key is used to delete the unwanted memory. If you press **DEL** key and do not release for more than 4 seconds, all memories will be deleted.
- When you check the dialed call memories, **DEL** key is used to delete the unwanted memory. If you press **DEL** key and do not release for more than 4 seconds, all memories will be deleted.