

VEF TA-204

INTRODUCTION

This manual is made in order to familiarize you with your phone set. In order to get maximum benefits of this product, we suggest that you read the User's manual carefully before using your phone set.

FEATURES

- FSK/DTMF dual system Auto switch, FSK message auto-adjusts the time of the unit.
- LCD displays incoming number, date, time, and total incoming calls.
- Outgoing dialed number and conversation time review and redial back.
- Local area code setting.
- Fast checking the incoming call by calling number and calling date & time.
- On-hook pre-dial and edit dialing number.
- Key lock: lock off/lock "0"/ all key lock. (110,119,120,122, 200,800 available).
- Hand-free dial and speak, conversation time display.
- P/T, ringer HI/Low, Volume HI/LOW adjustable.
- 16 kinds of melody selection.
- 20 one-touch memories and 12 two-touch memories.

INSTALLATION

This phone requires 3 AAA-sized 1.5V batteries. Open the battery compartment cover and insert the batteries in the right polarity, then close the cover. When you find that LCD display becomes very dark or incoming LCD not lighted, or some function is not correct, please change the batteries.

Plug line cord into jack at the rear of the telephone base, the other end of the line cord connects to telephone line. Plug coiled cord into handset modular jack. Plug the other end into the jack at the left side of the telephone. Set ringer volume according to your personal preference. Set the P/T switch as required by your telephone exchange.

Caller ID function is available only after you apply this service to the local telecom company.

SYSTEM SET UP

At on-hook state, press **SET** to enter the set function, LCD will display the item to set. You can press **UP** or **DOWN** to select the different item you would like to set up. When you choose one item, press **SET** again to go into the setting and use **UP** or **DOWN** to change the different setting. When finished, press **SET** to go into the next item setting. You can leave the set up mode at any time by pressing **DEL** key.

The detailed setting steps are the following:

SETTING THE DATE

SET YEAR

Press the **SET**, LCD will display **SET 1 DATE**, press **SET** again to enter the setting date mode. The digit for year **2002** (represents the **YEAR**) will illuminate on the LCD and **01** will flash, press **UP** or **DOWN** to edit the **YEAR**, then press **SET** to confirm and carry on the next step-set the **MONTH**.

SET MONTH

The digit **1 M 1 D 00:00** (represents the **MONTH, DATE, HOUR: MINUTE**) will illuminate on the LCD and **1** will flash, press **UP** or **DOWN** to edit the **MONTH**, then press **SET** to confirm and carry on the next step-set the **DATE**.

SET DATE

The digit for **1 M 1 D 00:00** (represents the **MONTH, DATE, HOUR: MINUTE**) will illuminate on the LCD and **1** will flash, press **UP** or **DOWN** to edit the **DATE**, then press **SET** to confirm and carry on the next step-set the **TIME CLOCK: MINUTE**. Then the LCD automatically changes the Week of that day.

SET TIME

The digit for **1 M 1 D 00:00** (represent the **MONTH, DATE, HOUR: MINUTE**) will illuminate on the LCD and **0** will flash, press **UP** or **DOWN** to edit the first digits of **HOUR**, then press **SET** to confirm and carry on the next step-set the second digits of **HOUR**. **0** will flash, press **UP** or **DOWN** to edit the second digits of **HOUR**, then press **SET** to confirm and carry on the next step-set the first digits of **TIME: MINUTE**. **0** will flash, press **UP** or **DOWN** to edit the first digits of **TIME MINUTE**, then press **SET** to confirm and carry on the next step-set the second digits of **TIME: MINUTE**. **0** will flash, press **UP** or **DOWN** to edit the second digits of **TIME: MINUTE**, then press **SET** to confirm and carry on the next step **CODE**

SETTING THE AREA CODE

LCD will display **SET 2 ACODE**; press **SET** to enter the set mode. LCD will display **CODE - - - -** and **-** will flash to indicate to set **ACODE**. Press **UP** or **DOWN** to adjust the **AREA CODE** number and press **SET** to confirm. Repeat this operation to the last digit. You only need to set 5 digits, if it is 4-digit, you need to press **SET** twice to exit.

SET FLASH TIME

LCD will display **SET FLASH**; press **SET** to enter the set mode. LCD will display **FLASH 1 600-** and **-** will flash to indicate the default flash time is 600 mini-second. Press **UP** or **DOWN** to select the right flash time and to press **SET** to confirm. There are four kinds of choices: 110ms, 300ms, 600ms, and 1000ms.

SETTING LCD BRIGHTNESS

LCD will display **SET 4 LCD**, press **SET** to enter, and then LCD will display **LCD 3** to indicate the default LCD brightness is in 3 step. Press **UP** or **DOWN** to select the right LCD brightness, then press **SET** to confirm. There are five steps of LCD brightness for your selection.

SET ALARM CLOCK

LCD will display **SET 5 ALARM**, press **SET** to enter, and then LCD will display **1 12:00 OFF** to indicate the default ALARM is off. This telephone has 3 groups of **ALARM CLOCK** setting. Press **UP** or **DOWN** to select the groups of **ALARM CLOCK**; press **SET** + **UP** or **DOWN** to set the **HOUR**; Press **SET** + **UP** or **DOWN** to set the **MINUTE**; Press **SET** + **UP** or **DOWN** to set the **ALARM ON/OFF**. then press **SET** to confirm.

SET ANTI STEAL-DIALING FUNCTION

LCD will display SET 6 IPP , press **SET** to enter, and then LCD will display IPP OFF ,press **UP** or **DOWN** key to adjust from IPP OFF to IPP ON according to your requirement. Press **SET** to confirm.

1. **ALAR OFF**: if you want to use an extension or use the unit on the line which voltage is lower than 24V. Please set the SET 7 ALAR on ALAR OFF.
2. **ALAR ON**: Anti-steal dialing function is available in this area. If someone use your line illegally, the unit will auto emit interference signal to fail the steal dialing. Please set the SET7 ALAR on ALAR ON

RINGER VOLUME ADJUSTMENT

Slide the ringer switch to HI/ LOW to adjust the ringer volume according to personal preference.

P/T MODE ADJUSTMENT

Slide the switch to P/T position to select PULSE or TONE dialing mode

ANSWERING CALLS

When receiving a phone call, the telephone will detect the FSK or DTMF format and display the calling number and the LCD will be lighted for convenient use. If this is a FSK format caller ID signal, the current date and time display will also be updated. If this is a newly coming call, the "NEW" icon will be displayed. If the incoming call is a repeat number, the "REP" icon will be displayed. If the incoming call is a private call, the icon ---P--- will be displayed. If the incoming call is out of area, the icon ---O--- will be displayed. If a wrong number comes in, the ---E--- will be displayed.

FROM HANDSET

1. Pick up the handset. Talk with the other end.
2. When finished, return the handset to the cradle

SWITCH TO SPEAKERPHONE

When using handset, press H-F key then return the handset to the base

When finished, press H-F key again.

FROM SPEAKER PHONE

1. When the unit rings, press H-F key, talk to the other end.
2. When finished, press **SPEAKER** key again.

NOTE: To receive the Caller ID message correctly, please answer a call after the telephone rings two times.

MAKING CALLS

USING HANDSET

1. Pick up the handset, and then you will hear a dialing tone.
2. Press the desired number. The LCD will display the call duration time after 6 seconds.
3. When finished, return the handset to the cradle.

USING SPEAKER PHONE

1. Press **SPEAKER** key, you can hear dialing tone
2. Dial desired number. Talk to the other end.
3. When finished, press **SPEAKER** key again

REDIAL

Pressing this button will redial the last number you dialed.

AUTO-REDIAL

When the Telephone Number which You desire to call is busy on the line, the telephone will send out the Busy warning. Press **REDIAL** key one time, the telephone will dial out the telephone No. automatically and keep on dialing until connection. And the telephone will send out the back ringing when it is connect through.

FLASH

Press **FLASH** key to transfer phone calls when you are using a telephone exchange (PABX). The flash time can be selected from 90ms, 120ms , 180ms , 300ms, 600ms and 1000ms.]

HOLD

Pressing **HOLD** button to hold the conversation. You can now talk freely without the caller hearing you. The caller will hear a digital melody. Press the **HOLD** button again if you want to resume your conversation.

PAUSE

Press **PAUSE** key when entering a telephone number! The letter **P** appears on the display. On the location where you have added a pause of 3.6 seconds.

VOL

Press **VOL** key when adjust the **SPEAKER** volume.

VIP

Press **VIP** key when you would like to keep the incoming number not be erased. Press **VIP** twice to change the number to the normal number.

20 ONE TOUCH MEMORY

Adding a number to a direct memory

Enter the telephone number you desired to store, Press **STORE** button. LCD will display **STORE IN** , Press the desired Direct Memory key (M1-M20).

Calling a direct memory

Press the desired memory key, and the stored number is displayed. Press the **REDIAL** key to dial out. Or just pick up the handset; press the desired memory key, it will automatically dial out.

12 TWO TOUCH MEMORY

Adding a number to an indirect memory

Enter the telephone number you desired to store, Press this **STORE** button. LCD will display **STORE IN** , press the desired numerical key (0-9, *,#).

Calling a indirect memory

Press **OUT** key, then press the desired memory key, Or just pick up the handset, press the AUTO key and desired numerical key. It will automatically call out.

RECEIVE THE CALLER ID NUMBER

When receiving a phone call, the telephone will detect the FSK format and display the calling number. If this is a FSK format caller ID signal, the current date and time display will also be updated. If this is a newly coming call, the **NEW** icon will be displayed. If the incoming call is a repeat number, the **REP** icon will be displayed. If the incoming call is a private call, the icon **---P---** will be displayed. If the incoming call is out of area, the icon **---O---** will be displayed. If a wrong number comes in, the **---E---** will be displayed.

You can use **UP** or **DOWN** key to check the incoming call information including number, date and time, (hold **UP** or **DOWN** key over 3 second, you can check the incoming calls very fast) and you can directly dial back with **REDIAL** key. If you call back a local number, press **REDIAL** one time; If you call back a long distance number and the coming call is not headed with a "0" (or the long distance code number), press **REDIAL** twice.

PRE-DIAL FUNCTION

At on-hook state, you can key in the calling number and edit the input mistake with the **DEL** key. After that press **REDIAL** to dial out.

DELETE FUNCTION

In set mode, **DEL** key is used to quit set.

When you use pre-dial function, **DEL** is used to correct the input mistake.

When you check the incoming call memories, **DEL** key is used to delete the unwanted memory. If you press **DEL** key and do not release for more than 4 second, all memories will be deleted.

When you check the dialed call memories, **DEL** key is used to delete the unwanted memory. If you press **DEL** key and do not release for more than 4 second, all memories will be deleted.

LOCK

The telephone has a three-step lock to restrict dialing. When you turn the key to the yellow point, any number cannot be dialed. When you turn the key to the green point, the number headed with "0" cannot be dialed. When you turn the key to the red point, no lock. The number headed with 110,119,120,122, 200,800 will not be restricted at any mode.

PARTS CHECKING LIST

User's Manual Base Handset Straight Line Cord Coiled Cord