

# USER'S MANUAL VEF TA-206

## INTRODUCTION

This manual is made in order to familiarize you with your phone set. In order to get maximum benefits of this product, we suggest that you read the User's manual carefully before using your phone set.

### FEATURES

- FSK/DTMF dual system Auto switch, FSK message auto-adjusts the time of the unit.
- LCD displays incoming number, date, time, and total incoming calls
- Outgoing dialed number and conversation time review and redial back
- Local area code setting
- Fast checking the incoming call by calling number and calling date & time
- On-hook pre-dial and edit dialing number
- Calendar and real-time clock display
- Hands-free dial and speak, conversation time display
- Anti Steal-Dialing

### INSTALLATION

This phone requires 2 AA-sized 1.5V batteries. Open the battery compartment cover and insert the batteries in the right polarity, then close the cover. When you find that LCD display becomes very dark or incoming LCD not lighted, or some function is not correct, please change the batteries.

Plug line cord into jack at the rear of the telephone base, the other end of the line cord should be connected to telephone line. Plug coiled cord into handset modular jack. Plug the other end into the jack at the left side of the telephone. Set ringer volume according to your personal preference. Set the P/T switch as required by your telephone exchange.

Caller ID function is available only after you apply this service to the local telecom company.

### SYSTEM SET UP

At on-hook state, press **SET** to enter the set at this time, LCD will display the item to set. You can press **UP** to select the different item you would like to set up. When you choose one item, press **SET** again to go into the setting and use UP to change the different setting. When finished, press **SET** to go into the next item setting. You can leave the set up mode at any time with **DEL** key.

The detailed setting steps are the following:

### SETTING THE DATE

#### SET YEAR

Press the **SET**, LCD will display **SET 1 DATE**, press **SET** again to enter the setting date mode. The digit for year **2002** (represents the **YEAR**) will illuminate on the LCD and **01** will flash, press **UP** or to edit the **YEAR**, then press **SET** to confirm and carry on the next step-set the **MONTH**.

#### SET MONTH

The digit **1 M 1 D 00:00** (represents the **MONTH, DATE, HOUR: MINUTE**) will illuminate on the LCD and **1** will flash, press **UP** to edit the **MONTH**, then press **SET** to confirm and carry on the next step-set the **DATE**.

#### SET DATE

The digit for **1 M 1 D 00:00** (represents the **MONTH, DATE, HOUR: MINUTE**) will illuminate on the LCD and **1** will flash, press **UP** or **DOWN** to edit the **DATE**, then press **SET** to confirm and carry on the next step-set the **HOUR: MINUTE**. Then the LCD automatically changes the Week of that day.

#### SET TIME

The digit for **1 M 1 D 00:00** (represents the **MONTH, DATE, HOUR: MINUTE**) will illuminate on the LCD and **0** will flash, press **UP** to edit the first digits of **HOUR**, then press **SET** to confirm and carry on the next step-set the second digits of **HOUR**. **0** will flash, press **UP** or **DOWN** to edit the second digits of **HOUR**, then press **SET** to confirm and carry on the next step-set the first digits of **TIME: MINUTE**. **0** will flash, press **UP** to edit the first digits of **TIME: MINUTE**, then press **SET** to confirm and carry on the next step-set the second digits of **TIME: MINUTE**. **0** will flash, press **UP** to edit the second digits of **TIME: MINUTE**, then press **SET** to confirm and carry on the next step **CODE**

### SETTING THE AREA CODE

LCD will display **SET 2 CODE**; press **SET** to enter the set mode. LCD will display **CODE - - - -** and **-** will flash to indicate to set **AREA CODE**.

Press **UP** to adjust the **AREA CODE** number and press **SET** to confirm. Repeat this operation to the last digit. You only need to set 5 digits, if it is 4-digit, you need to press **SET** twice to exit.

### SETTING LONG DISTANCE CODE

LCD will display **SET 3 LCODE**; press **SET** to enter the set mode. LCD will display **LCODE - - - -** and **-** will flash to indicate to set **LONG DISTANCE CODE**. Press **UP** to adjust the **LONG DISTANCE CODE** number and press **SET** to confirm. Repeat this operation to the last digit.

You only need to set 5 digits, if it is 4-digit, you need to press **SET** twice to exit.

### SETTING THE FLASH TIME

LCD will display **SET 4 FLASH**, press **SET** to enter, and then LCD will display **FLASH 1 600** to indicate the default flash time is 600 mini-second.

Press **UP** to select the right flash time and to press **SET** to confirm. There are six kind of choices: 90ms, 120ms, 180ms, 300ms, 600ms and 1000ms.

### SET ANTI STEAL-DIALING FUNCTION

LCD will display **SET 7 ALAR**, press **SET** to enter, and then LCD will display **ALAR OFF**, press **UP** or **DOWN** key to adjust from **ALAR OFF** to **ALAR ON** according to your requirement. Press **SET** to confirm.

1. **ALAR OFF**: if you want to use an extension or use the unit on the line which voltage is lower than 24V? Please set the SET 7 ALAR on ALAR OFF.
2. **ALAR ON**: Anti-steal dialing function is available in this area. If someone use your line illegally, the unit will auto emit interference signal to fail the steal dialing. Please set the SET 7 ALAR on ALAR ON

### **RINGER VOLUME ADJUSTMENT**

Slide the ringer switch to HI/ LOW to adjust the ringer volume according to personal preference.

### **P/T MODE ADJUSTMENT**

Slide the switch to P/T position to select PULSE or TONE dialing mode

### **ANSWERING CALLS**

When receiving a phone call, the telephone will detect the FSK or DTMF format and display the calling number and the LCD will be lighted for convenient use. If this is a FSK format caller ID signal, the current date and time display will also be updated. If this is a newly coming call, the "NEW" icon will be displayed. If the incoming call is a repeat number, the "REP" icon will be displayed. If the incoming call is a private call, the icon ---P--- will be displayed. If the incoming call is out of area, the icon ---O--- will be displayed. If a wrong number comes in, the ---E--- will be displayed.

### **FROM HANDSET**

1. Pick up the handset. Talk with the other end.
2. When finished, return the handset to the cradle

### **SWITCH TO SPEAKER PHONE**

1. When using handset, press **SPEAKER** key then return the handset to the base
2. When finished, press **SPEAKER** key again.

### **FROM SPEAKER PHONE**

1. When the unit rings, press **SPEAKER** key, talk to the other end.
2. When finished, press **SPEAKER** key again.

**NOTE**: To receive the Caller ID message correctly, please answer a call after the telephone rings two times.

### **MAKING CALLS**

#### **USING HANDSET**

1. Pick up the handset, and then you will hear a dialing tone.
2. Press the desired number. The LCD will display the call duration time after 6 seconds.
3. When finished, return the handset to the cradle.

#### **USING SPEAKER PHONE**

1. Press **SPEAKER** key, you can hear dialing tone
2. Dial desired number. Talk to the other end.
3. When finished, press **SPEAKER** key again

### **REDIAL**

1. If line is engaged
2. Press **REDIAL** key for REDIAL. The telephone will dial out the pre-telephone No. automatically.

### **AUTO-REDIAL**

When the Telephone Number which You desire to call is busy on the line, the telephone will sent out the Busy warning. Press **REDIAL** key one time, the telephone will dial out the telephone No. automatically and keep on dialing until connection. And the telephone will send out the back ringing when it is connect through.

### **FLASH**

Press **FLASH** key to use to transfer phone calls when you are using a telephone exchange (PABX). The flash time can be selected from 90ms, 120ms , 180ms , 300ms, 600ms and 1000ms.

### **PAUSE**

Press **PAUSE** key when entering a telephone number! The letter **P** appears on the display. On the location where you have added a pause of 3.6 second

### **HOLD**

Press **HOLD** button to hold the conversation. You can now talk freely without the caller hearing you. The caller will hear a digital melody. Press **HOLD** button again if you want to resume your conversation.

### **RECEIVE THE CALLER ID NUMBER**

When receiving a phone call, the telephone will detect the FSK format and display the calling number. If this is a FSK format caller ID signal, the current date and time display will also be updated. If this is a newly coming call, the **NEW** icon will be displayed. If the incoming call is a repeat number, the **REP** icon will be displayed. If the incoming call is a private call, the icon ---P--- will be displayed. If the incoming call is out of area, the icon ---O--- will be displayed. If a wrong number comes in, the ---E--- will be displayed.

You can use **UP** or **DOWN** key to check the incoming call information including number, date and time, (holding **UP** or **DOWN** key over 3 second, you can check the incoming calls very fast) and you can directly dial back with **REDIAL** key. If you call back a local number, press **REDIAL** one time; If you call back a long distance number and the coming call is not headed with a "0" (or the long distance code number),

press **REDIAL** twice.

#### **DIALED NUMBER CHECK**

You can check the outgoing dialed numbers and the conversation time with the **CHECK** key. If you want to dial that number again, directly press **REDIAL** key.

#### **PRE-DIAL FUNCTION**

At on-hook state, you can key in the calling number and edit the input mistake with the **DEL** key. After that, press **REDIAL** to dial out.

#### **DELETE FUNCTION**

In set mode, **DEL** key is used to quit set.

When you use pre-dial function, **DEL** is used to correct the input mistake.

When you check the incoming call memories, **DEL** key is used to delete the unwanted memory. If you press **DEL** key and do not release for more than 4 second, all memories will be deleted.

When you check the dialed call memories, **DEL** key is used to delete the unwanted memory. If you press **DEL** key and do not release for more than 4 second, all memories will be deleted.

#### **PARTS CHECKING LIST**

User's Manual   Base   Handset   Straight Line Cord   Coiled Cord