

## **Congratulations!**

You are now the owner of a VEF&CO Phone telephone set, a quality communications product. To ensure trouble-free operation, please read these instructions carefully before beginning installation.

## **Features:**

- FSK/DTMF dual system auto detect.
- 24 kinds of ringer
- Real time clock display.
- 7 groups of one-touch memories with 32 digits and 10 groups of two-touch memories with 16 digits.
- Store maximal 16 groups outgoing calls with 8 digits, longest digits can support 32 digits.
- Store maximal 62 groups incoming calls with 8 digits.
- Auto redial function.
- High quality Hands-Free
- Flash time selectable: 1000ms/600ms/300ms/110ms
- Alarm Function.
- Lock function: 3 positions.
- P/T Mode, HF volume, Ringer volume adjustable by switch.

## ***Installation***

### **Connecting the telephone**

1. Insert 3 AA size batteries in the battery compartment at the base unit bottom.
2. Insert one end of the handset coil cord into the jack in the handset and insert the other end into the jack located at the left side of the phone.
3. Insert one end of the straight line to the jack located on the upper side of the phone and insert the other end to the wall jack.

### **Caller ID service**

This unit is compatible with a call ID service offered by your telecom company, if you subscribe the caller ID service, the calling party's information will display in the LCD after the first ringing.

## **Setting**

### **Clock (Date and Time)**

1. Press "SET" and hold for 3 seconds, the LCD will prompt "SET 1 DATE".
2. Press "SET" to enter Year, Date & Time setting mode and "year" digits will flash.

3. Press “UP” or “DOWN” to change the digits, and “SET” to change the flashing location.
4. Press “SET” to save the setting and enter the next menu.
5. During setting, picking up the handset means to save the setting and exit.

### **Local area code setting**

1. Press “SET” and hold for 3 seconds, the LCD will prompt “SET 1 DATE”.
2. Press “DOWN” and the LCD prompts “SET 2 CODE”.
3. Press “SET”, the LCD prompts “CODE ----” and the first “-“ will flash. Press “UP” or “DOWN” to adjust the first digit and then press “SET” to set the next one. And so on, until the desired local area code setting complete.
4. Press “SET” to save the setting and enter the next menu.
5. During setting, picking up the handset means to save the setting and exit.

### **Out area code setting**

1. Press “SET” and hold for 3 seconds, the LCD will prompt “SET 1 DATE”.
2. Press “DOWN” two times and the LCD prompts “SET 3 PCODE”.

3. Press “SET”, the LCD prompts “PCODE --” and the first “-“ will flash. Press “UP” or “DOWN” to adjust the first digit and then press “SET” to set the next one. And so on, until the desired out area code setting complete.
4. Press “SET” to save the setting and enter the next menu.
5. During setting, picking up the handset means to save the setting and exit.

### **Alarm setting**

1. Press “SET” and hold for 3 seconds, the LCD will prompt “SET 1 DATE”.
2. Press “UP” and the LCD prompts “SET 5 ALERT”.
3. Press “SET” to enter, the LCD will display “00-00 OFF”, and the first digit is flashing.
4. Press “UP” or “DOWN” to change the digits, and press “SET” to change the flashing location. And press “UP” or “DOWN” to select alarm ON or OFF.
5. Press “HF” or pick up the handset to save the setting and exit.

### **To make a call:**

Pick up the handset and listen for a dial tone, dial the numbers you want to call.

**Pre-dialing:** In hook-on mode, input the desired telephone number, press “DEL” to erase if wrong input, when finish, press “REDIAL” to call it out.

**To receive a call:**

When your phone rings, pick up the handset and start the conversation.

**Viewing the Caller ID list**

This phone automatically stores the data of all incoming calls received.

To display the Caller ID data, press “UP” or “DOWN” button. Every caller ID data includes calling date, time and caller’s number. When find desired incoming call, press “REDIAL” to dial out that number immediately.

**Viewing outgoing calls list and dial back.**

Press “OUT”, the LCD will display the last dialed number and the dialing time. Press “UP” to view the previous dialed numbers. Press “REDIAL” to dial out the number you selected.

**Memories setting**

This unit can store up to 7 one-touch memory and 10

two-touch memory phone numbers.

**7 one-touch memory**

How to store? – In hook-on mode, input the desired number or search the desired number by pressing “UP” or “DOWN”, then press “STORE” button and press “Mx” button to save the number. The “Mx” means there is 7 one touch memory buttons can be used from M1-M7.

How to recall? – In hook-on mode, press “M1-M7” where you stored the phone number you want to dial out, while the phone number will show on the LCD, press “HF” to dial out.

**10 two-touch memory**

How to store? - In hook-on mode, input the desired number or search the desired number by pressing “UP” or “DOWN”, then press “STORE” button and press the key (from 0 to 9) where your desired number will be stored in. Press “HF” to exit.

How to recall? - In hook-on mode, press “AUTO” and the key which stored the phone number you want to dial out, while the phone number will show on the LCD. Then pick up the handset or press “HF” to dial out.

**DEL / FLASH / REDIAL/HOLD/RINGER/HF**

**DEL:**

1. Press DEL to exit setting mode.
2. When review incoming or outgoing calls, press DEL to delete the record. If hold DEL for 3 seconds will delete all record.

**FLASH:**

This button allow you to get dial tone to make a new call without hanging up the handset. Also allow you to access calling service from your local telephone company such as call waiting.

FLASH duration is set at the factory for 110 ms.

**REDIAL:**

The telephone automatically remembers the last number dialed. The number will remain in REDIAL until another number is dialed.

To redial the last number called:

1. Pick up handset or press the hands free button.
2. Wait for dial tone. Press REDIAL.

**HOLD**

This button allows you to interrupt a conversation without hanging up when it happens an important or private circumstances occur on your side and you don't want the other end to hear through the telephone. You can press this button and the other end will hear a melody. After you finish the conversation with the third party, press this button again or "HF" button to continue your phone call.

**RINGER**

Press this button to enter Ringer setting, keep pressing this button to choose the different Ringer, there is 24 kinds of Ringer for your selection.

**Hands-Free (HF) button**

This button enables you to dial a call or answer a call without picking up the handset.

**Lock Function**

The telephone has a three-step lock to restrict dialing. When you turn the key to the yellow point, any number cannot be dialed. When you turn the key to the green point, the number headed with "0" cannot be dialed. When you turn the key to the red point, no lock. The number headed with 110,112,119,120 will not be restricted at any mode.

## *INSTRUCTION MANUAL*

---

### **T/P , Ringer volume, Hands-Free volume Switch**

All the switches are located on the top side of the phone.

**T/P**-If you have tone service, switch to “T” for TONE. If you have pulse service, switch to “P” for PULSE.

**Ringer volume**-It has 3 levels for your selection, Low, High and OFF.

**Hands-Free volume**-It has 2 levels for your selection, Low and High.

### **TROUBLESHOOTING**

? No dial tone

+ Cord plugs not properly inserted in jacks. (Ensure all plugs properly inserted in correct jacks.)

? Cannot hear or be heard

+ Handset cord plugs not properly inserted in jacks. (Ensure all plugs properly inserted in correct jacks.)

? Noise

+ The circuit or the connector may be moist or rust. (Change the circuit or connector.)