


VEF TA-411

FEATURE LIST

- 10-Two Touch Speed Dialing Memories.
- Flash Function.
- Pause Function.
- Last Number Redial.
- Tone/pulse dialing mode switch.
- Ringer volume high/low switch.
- Handset volume control.
- Desktop/Wall Mounting.

LOCATION OF CONTROLS

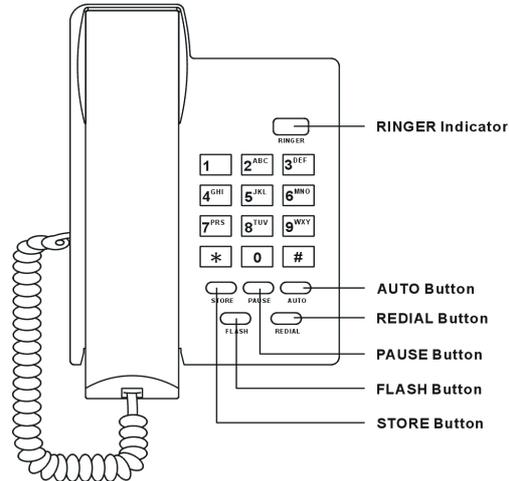

INSTALLATION

1. Connect one end of coiled cord to the jack of handset, connect the other end to the jack of base set.
2. Plug one end of flat cable to line jack of the phone, plug the other end to wall jack.

OPERATION

RECEIVING A CALL

1. Pick up the handset when the phone rings.
2. When you finish the phone call, put the handset back on the phone base.

MAKING PHONE CALLS

1. Pick up the handset.
2. Dial the number you want to call.

LAST NUMBER REDIALING

1. Pick up the handset to you hear a dial tone.
2. Press REDIAL button, the last number will be automatically redialed.

USING FLASH BUTTON

The FLASH button replaces the hook switch when using features such as call waiting and call forwarding.

PAUSE FUNCTION

To dial a number from an automatic switch board system (PABX), you must first dial an access code. Then pause a few second to wait for an outside line. The "PAUSE" key stores a 2-3 seconds pause to give the automatic switchboard time to find available outside line.

RINGER VOLUME HI/LO SELECTOR

Select the desired volume for ringer by glide the ringer HI/LO selector.

T/P DIALING SELECTOR

You can choose the type of dialing by selecting TONE/PULSE mode. . When you dial a number in the pulse mode, you can just press * button to switch to tone mode.

STORING TELEPHONE NUMBERS

1. Pick up the handset.
2. Press STORE button once.
3. Dial the number you want to store.
4. Press STORE button one more time.
5. Press one of the dial button (0-9) for speed dialing memory location.
6. Now the phone number is stored and the whole process is completed.
7. Repeat the above procedures to store other phone numbers.

TO SPEED DIAL FROM STORED NUMBERS

1. Pick up the handset and hear the dial tone.
2. Press AUTO button once and then press one of the button from the 0-9. The phone number will be dialed automatically from the memory.