

ANSWERING CALLS

From handset

Pick up the handset. Talk with the other end.

When finished, return the handset to the cradle.

MAKING CALLS

Using Handset

Pick up the handset; you will hear a dialing tone.

Press the desired number.

When finished, return the handset to the cradle.

Redial

When you want to call back the last dialed telephone number, press the "REDIAL" button as soon as you have picked up the handset. The number will be dialed automatically.

Flash

Press the "Flash" key to activate certain services as "Call waiting" (if the service is provided by your telephone company); or to transfer phone calls when you are using a telephone exchange (PABX). The default value of Flash is 600ms.

Pause

Pressing this button will insert a time gap of 3.6s between two digits.

Hold

At off-hook state, press **HOLD** key to keep the line engaged while doing other work and you can return the handset to the base. You can pick up the handset again to renew the conversation.

SETTING THE RINGER VOLUME

The ringer volume switch is located at the base of the telephone. You can choose between "H" and "L".

P/T MODE SELECTOR

Slide the DIALING switch to P/T position to select dialing mode PULSE or TONE. In Pulse mode press * button to switch to Tone mode once.

STORING PHONE NUMBER INTO ONE-TOUCH MEMORY

1. Pick up the handset and press "Store" key.
2. Dial the phone number you want to store, including Tone (*) and Pause each of which is counted as one digit.
3. Press one of the 3 one-touch memory buttons (EM1, EM2, EM3).
4. Repeat steps 1 to 3 to store numbers into other locations.

TO CHANGE A STORED NUMBER

Just store a new number, as described above; the old number will be erased automatically.

MAKING CALLS WITH 3 ONE-TOUCH SPEED-DIALING MEMORIES

1. Pick up the handset; press one of the one-touch speed dial buttons (EM1 to EM3).
2. The phone will dial the number you stored into the button.

TWO- TOUCH MEMORIES

1) Store in the telephone number

Pick up the handset and press "Store" key.

Enter the telephone number, press "Store" key.

Press one of the numerical buttons (0-9).

2) Calling a two-touch memory number

Pick up the handset and press "AUTO" key.

Press the desired numerical button (0-9).

The stored number will be dialed out automatically.

LOCK

Two Way Lock: When you turn the key to the green point, the number headed with "0" cannot be dialed.

When you turn the key to the red point, no lock.