


VEF TA-901

FEATURE LIST:

- FSK/DTMF System Caller ID Phone.
- 900 MHz Operation Frequency Cordless Telephone.
- 40-Channels Auto-Scanning or Manual Selectable.
- 65,536 Automatic Digital Security Code.
- Store Up To 64 Caller ID Memories.
- 16 Type Ringer Melody and ringer ON/OFF.
- 4-grade LCD Brightness Can be Adjust.
- Receiver volume high/low selection.
- Review the Caller ID List to Dialing Back.
- Pre-Dialing with Clear LCD for Handset.
- Caller Number, Time and Date Display.
- Flash and Pause button.
- Last Number Redial Function.
- Low battery Indicator on LCD.
- Charge / Power LED Indicator.
- Tone/Pulse Dial mode selector on the Base unit.

LOCATION OF CONTROLS:

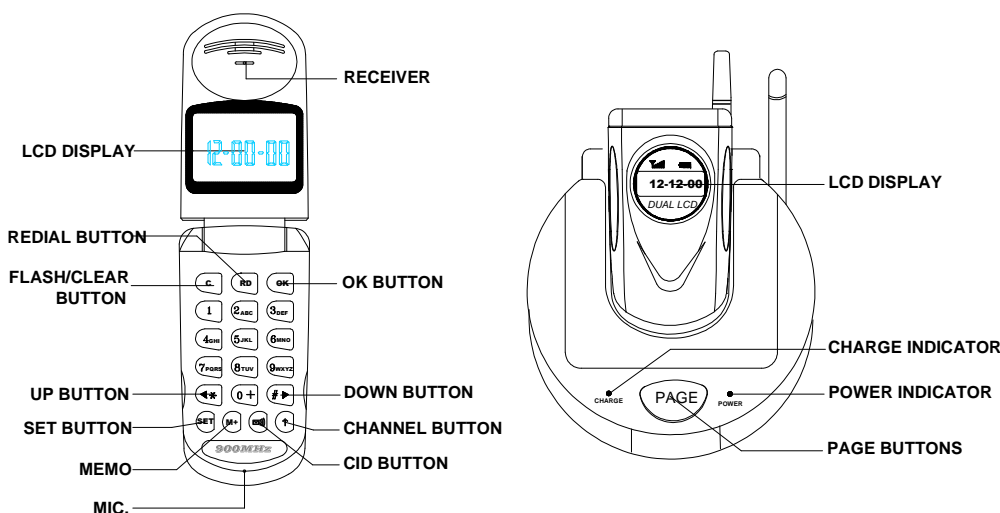

INSTALLATION

1. Open the battery compartment cover at back of Handset load in recharge battery.
2. Connect the telephone wire to the telephone set and wall jack.
3. Connect DC 9V adapter to the phone set and the AC socket.

NOTE: If the power of battery is low, the low battery icons will appear on LCD, must recharging them soon. The Battery must be charged for full 12 hours before the cordless phone is used for the first time.

SETUP THE TELEPHONE

65.536 AUTOMATIC DIGITAL CODE SECURITY

Many cordless telephones operate similarly and on the same frequency without digital code security. Another cordless Handset could make calls using your Base and telephone line. Therefore to avoid any unauthorized calls through your Base, a Digital code feature was added to your Cordless phone. This Digital Code is shared only between the Handset and Base.

SET UP SECURITY CODE

1. Press and hold PAGE button on the base for more than 3 second.
2. Press Channel button (↑) on the handset to set Security Code.
3. When you hearing continuous beep tone. The Digital Code is reset randomly to one of more than 65,536 codes.
4. Release the PAGE button on base unit.

NOTE: If you hearing 2 different beep tone, the security code may be not set properly, must reset it again.

SET UP YOUR AREA CODE

1. Press “*←” or “#→” button to view the main menu, and LCD display “LOCAL” and blink, press SET button.
2. The display show: OFF, press “*←” or “#→” button to set ON or OFF.
3. If you set ON, press SET button once more and key in you desired local area code, press SET button to confirm.

SET UP THE TIME & CLOCK

1. Press “*←” or “#→” button to view the main menu, until LCD display “CLOCK” and blink, press SET

button.

2. Press “*←” or “#→” button to set the desired month, press SET button to confirm.
3. Repeat the same operation to set date\ hours and minute, press SET button to confirm.



SET UP LCD BRIGHTNESS

1. Press “*←” or “#→” button until the LCD display “BRIGHT” and blink, press SET button.
2. Press “*←” or “#→” button to set you desired brightness for the LCD.
3. Press SET button to confirm.

SELECT RINGER MELODY

1. Press “*←” or “#→” button until the LCD display “RING” and blink, press SET button.
2. Press “*←” or “#→” button to display and play the 16 different ringer melodies.
3. When you hear the ringer melody you want to use, press the SET button to confirm.

RECEIVER VOLUME HIGH/LOW SELECTION

During conversation, press SET button to set you desired receiver volume, LCD will display the icon. “” for low and “” for high.

T/P DIALING SELECTOR

You can choose the type of dialing by selecting TONE/PULSE mode.

SELECTING CHANNEL

During conversation, you might need to manually channel in order to get rid of static. Press Channel button (↑) to seek clear channel.

OPERATION

RECEIVING CALLS AS A NORMAL TELEPHONE

1. When your phone is on the base, take up the handset from the base, open the handset cover and answer the call.
2. When your phone is not on the base, open the handset cover, press OK button and answer the call.
3. Press OK button and close the handset cover to disconnect the telephone line, or you can close the handset cover, put the handset back to the charger, your phone will automatically enter stand-by mode.

MAKING CALLS AS A NORMAL TELEPHONE

Method 1.Normal dialing

1. Press OK button and dial the number you want to call.
2. Press OK button to release the telephone line when conversation is over.

Method 2 Pre-Dialing (On-Hook Dialing)

1. In the stand by state dial the number you want to call. Press the “C” button to delete any wrong digit.
2. Press OK button to dial out the number.
3. Press OK button once again to finish conversation.

LAST NUMBER REDIAL

In the stand by state, press OK button and then press the “RD” button, the last dialed-out number will be redialed out automatically.

NOTE: To redial after hearing a busy signal press “C” and then press “RD” button.

FLASH FUNCTION

Press the “C” button to terminate a call institute another “C” call or to getting another call from “call waiting”.

STORE 10 TELEPHONE NUMBER INTO THE MEMORY

1. When on-hook, press MEM button.
2. Press “*←” or “#→” button to select memory location. The digit icon will show at LCD.
3. Press SET button to enter store mode.
4. Key in the numbers you want to store, press SET button confirm.
5. Repeat the above procedures to store other phone numbers.
6. Press the MEM button once again to exit when store numbers completes.


TO DIAL A NUMBER FROM MEMORY

1. Pick up the Handset press OK button into In-Use status.
2. Press MEM button. Then press memory location button (0-9).
3. The telephone will automatically dial out number and will shown on display.


USING AS A CALLER ID PHONE

Caller ID function is available only after you apply this service to the local telecom company.

VIEWING THE CALLER ID LIST

1. When on-hook, press CID button () then use “*←” or “#→” to review caller ID list.
2. Incoming calls will be stored in the order they were received.
3. Press “0” button on keypad to review the incoming calls number pass over 12 digits and current date and time of the incoming call.

CALLING BACK A NUMBER FROM THE CALER ID LIST

1. When on-hook, press CID button () then use “*←” or “#→” to review caller ID list. And selecting the number you want to dial.

2. When the number you want to call back is displayed on the LCD, press OK button, the current number will be dialed automatically.

ERASE DATA FROM THE CALLER ID LIST

1. Press the CID button (☎) and then press the “*←” or “#→” button to select the number you want to erase.
2. Press the “C” button once to delete current displayed number and hear 2 beep tones.
3. Press and hold “C” button for 3 seconds, the LCD will show "00" as number of total calls and hearing 2 continuous beep then all calls have been erased.

TECHNICAL DATA

Batteries:	1\3AAA, NiMh 210 mAh 3.6V
Max. Standby time:	48 hours
Max. Talk time:	3.5 hours
Ambient temperature:	+5°C to +45°C
Permitted relative air humidity:	25 to 85%
Power supply base adapter:	220/230V, 50Hz