


VEF TA-902

FEATURE LIST

- FSK/DTMF Dual System caller ID.
- 900 MHz (CT-1) Operation Frequency Cordless Telephone.
- 40-Channels Auto-Scanning or Manual Selectable.
- 65,536 Automatic Digital Security Code.
- Store Up To 64 Caller ID Memories.
- 10-Two Touch Memories Speed Dialing.
- Review the Caller ID List to Dialing Back.
- Pre-Dialing with Clear LCD for Handset.
- Flash and Last Number Redial Function.
- POWER, CHARGE LED Indicator.
- Tone/pulse Dialing mode selection.
- Touch Any Key To Answer Incoming Call.
- Hands free earphone.

LOCATION OF CONTROLS

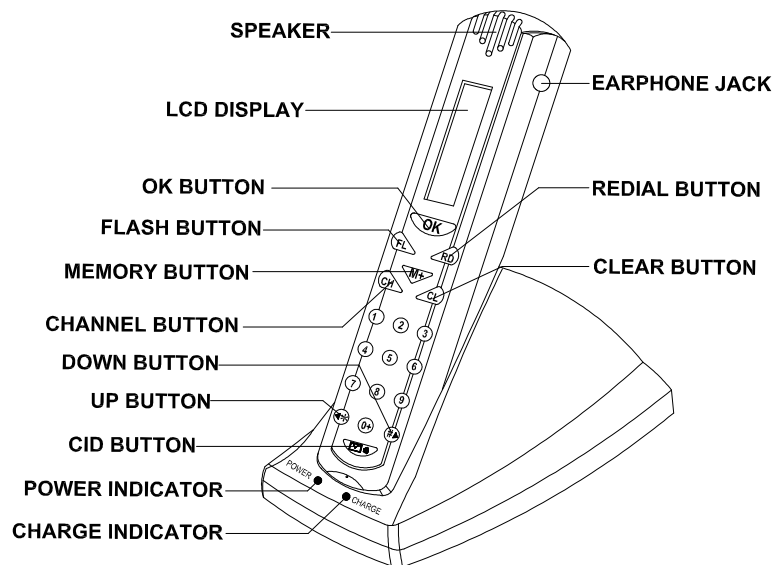

INSTALLATION

1. Open the battery compartment cover at back of handset load in recharge battery.
2. Plug one end of flat cable to line jack of base unit, plug the other end to wall jack.
3. Connect the power DC 9V adaptor to the base unit.

NOTE: The battery must be charged for full 12 hours before the cordless phone is used for the first time.

SETUP THE TELEPHONE

65,536 AUTOMATIC DIGITAL CODE SECURITY

Many cordless telephones operate similarly and on the same frequency without digital code security. Another cordless Handset could make calls using your Base and telephone line. Therefore to avoid any unauthorized calls through your Base, a Digital code feature was added to your Cordless phone. This Digital Code is shared only between the Handset and Base. The code is set automatically when you first use the phone.

SET UP SECURITY CODE

Remove the Handset from the Base unit then set it down again. When you hear 2 continuous beep tones, the security Code is reset randomly to one of more than 65,536 codes.

SET UP THE TIME & CLOCK

1. Press and hold CID button (☒) for 3 seconds the hour digit will flash.
2. Press UP button (*4) to adjust the desired the hour.
3. Press CID button (☒) again change to set minute.
4. Press UP button (*4) to adjust the desired the minute.
5. While finished the set procedure press CID button (☒) once again to exit set procedure and correct digit will stop on the display.

T/P DIALING SELECTOR

You can choose the type of dialing by selecting TONE/PULSE mode.

SELECTING CHANNEL

During talking, you might need to manually change the in order to get rid of static. Press and release the "CH" button of the handset unit to advance to the next clear channel and number of current channel shown on display.

POWER ON/OFF

Press and hold "FL" buttons for 3 seconds the power of handset will turn-on. Repeatedly step to turn-off

power.

OPERATION

ANSWERING AN INCOMING CALL

1. When you phone rings press one of any buttons on the handset to answering incoming call.
2. Press "OK" button to release the telephone line when conversation is over (Or direct set it down on the base cradle, your phone will automatically into the stand-by mode).

MAKE AN OUTGOING CALL

Method 1 Normal dialing:

1. Stand by state, press "OK" button once and dial the number you want to call.
2. Press "OK" button to release the telephone line when conversation is over.

Method 2 Pre-Dialing (On-Hook Dialing):

1. Stand by state, dial the number you want to call.
 2. Press "OK" button to dial out the number.
 3. Press "OK" button to release the telephone line when conversation is over.
- If you enter any wrong digital, press "FL" button to delete.

USING RD BUTTON TO REDIAL NUMBER

To automatically redial the last number called press "RD" button instead of dialing the number again.

NOTE: To redial after hearing a busy signal press "FL" and then press "RD" button.

USING BUTTON "FL" AS FLASH FUNCTION

Press the "FL" button to terminate a call institute a dial tone for another call or to getting another call from "Call waiting".

STORE 10 TELEPHONE NUMBER INTO THE MEMORY

You can store the phone number frequently called into the memory of phone so that you can dial the number with dialing buttons.

1. Stand-by state, press the "M+" button once and key in the number you want to store.
2. Press "M+" button once again.
3. Press one of those numerical (0-9) buttons on the dialing keypad for memory location, when you hearing 2 continuous beep tones, this phone number be stored.

NOTE: If you store a new number into the same button, the new number will replace the old number.

TO DIAL A NUMBER FROM MEMORY

1. Stand by state, press "OK" button into in-use status.
2. Press "M+" button and selecting desired the one of those (0-9) buttons on the keypad. The phone number store in the button appears on the display and will be dialed.

USING AS A CALLER ID PHONE

VIEWING THE CALLER ID LIST

In the on-hook status, press CID button (☒☎) and then press the UP button (*◀) and DOWN button (▶#) to review the caller ID list.

CALLING BACK A NUMBER FROM THE CALLER ID LIST

1. In the stand-by status press the CID button (☒☎) and than press UP (*◀) or DOWN (▶#) button to review and selecting the number you want to dial.
2. Confirm the number and press "OK" button, the number show on display automatically dial out.

ERASE DATA FROM THE CALLER ID LIST

※ *To erased one stored number at a time:*

1. Press the CID button (☒☎) and then press the UP (*◀) or DOWN (▶#) button to select the number you want to erase.
2. Press the "FL" button once to confirm deletes current displayed record and hearing 2 continuous beeps. When you abort delete press any buttons.

※ *To erase the entire list at once:*

Press the CID button (☒☎) and than press and hold "FL" button about 3 seconds, all of the caller ID number are erased.